

# PicoStation2 HP setup for WAP using master DHCP server mbs7-13-13 Wireless Access Point for notebooks, tablets, smart phones

## Connecting a Wireless Client to PicoStation2 HP;

 
### Windows

1. Go to *Connect to Network*.

--**Windows 7** Right-click on the *Network* icon.

--**Windows Vista** Go to **Start > Connect To**.

--**Windows XP** Right-click the *Wireless Network* icon in the *System Tray* (lower right corner of the screen) and then click **View Available Wireless Networks**.

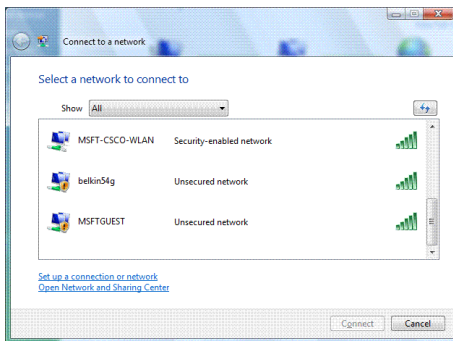

2. Select the wireless network (SSID) **fmhii** and then click **Connect**.

3. Type the passphrase **XXXXXXXXXX** and click **OK** or **Connect**.

4. Launch your web browser to begin browsing the web.

### Mac

1. Click the *AirPort* icon in the menu bar (top left side of the screen).

2. Select the wireless network (SSID) **fmhii**

3. Type the passphrase **XXXXXXXXXX** and click **OK**.

4. Once connected the *AirPort* icon will change from gray to solid black. The number of black lines indicates the signal strength. Launch your web browser to begin browsing the web.

Let's power on your **iPhone** and start here:

1) Tap Settings icon on Home screen of iPhone.



 
2) After that tap on Wi-Fi icon.





3) Proceed to select the wireless network



Note: Make sure the Wi-Fi feature of iPhone is ON

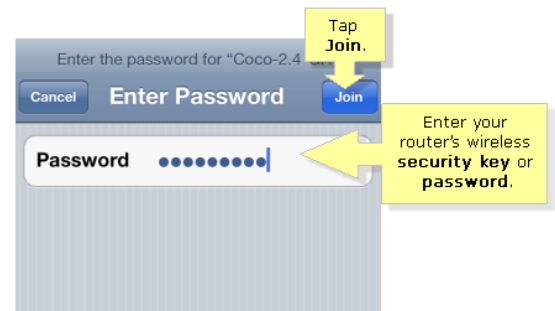

# Wireless devices get IP address from DHCP server

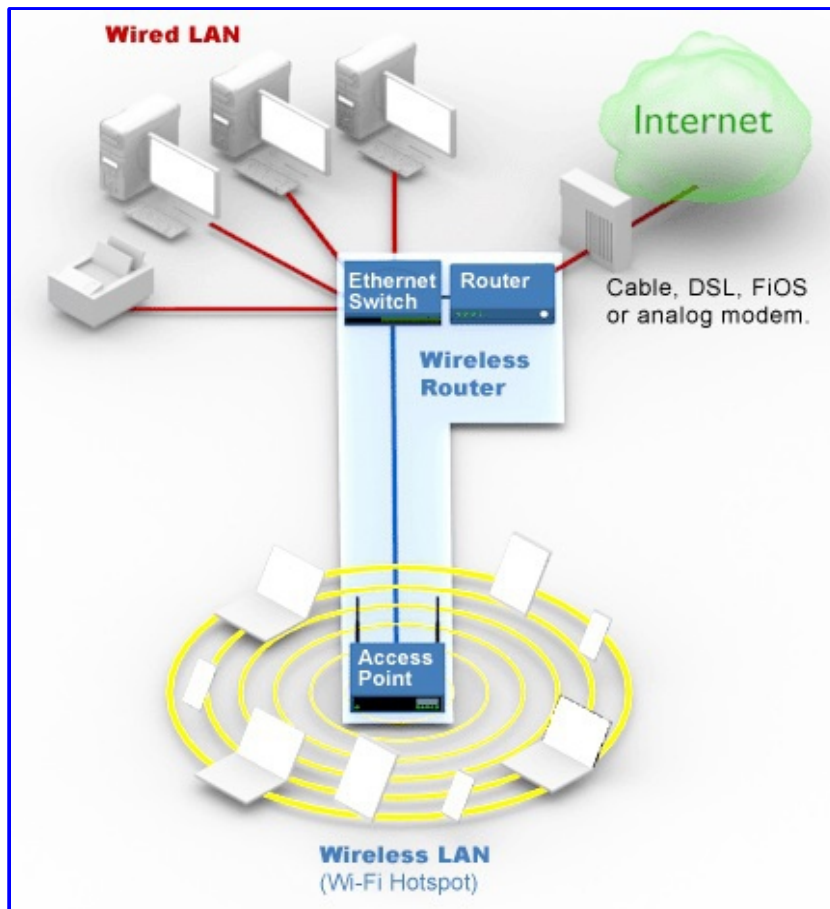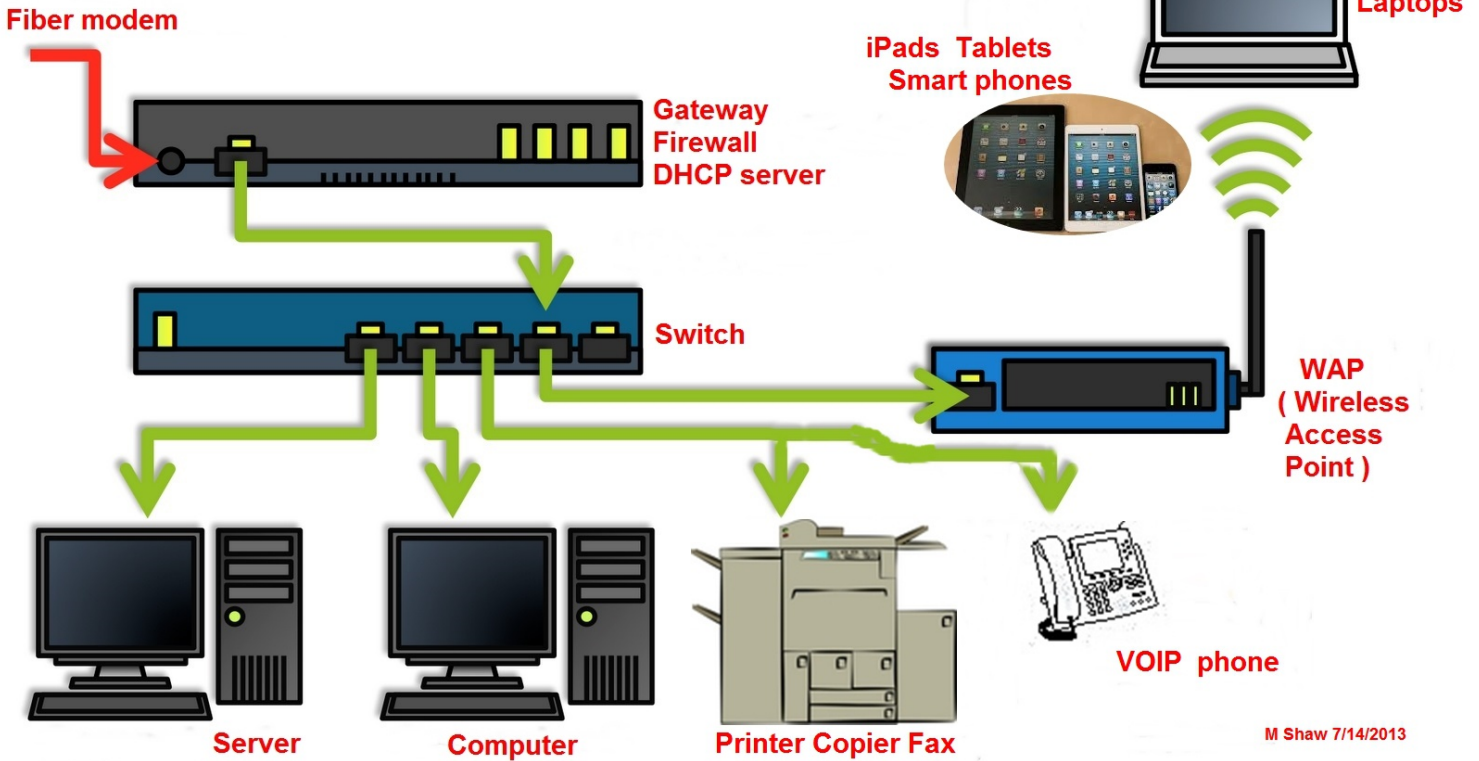  

PicoStation2 HP setup:

DHCP from  
Network Server

M. Shaw 7/14/2013